

280

Chatterbox  
JR.

# User Manual



INTERCOM  
NETWORK RADIO

# FAQs

## Question 1

What should I do if a **QR** code appears when I turn on the device?

Please provide us with the **IMEI** code or **the code on the front of the packaging box**.

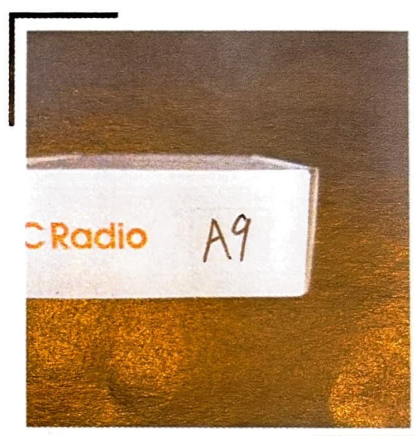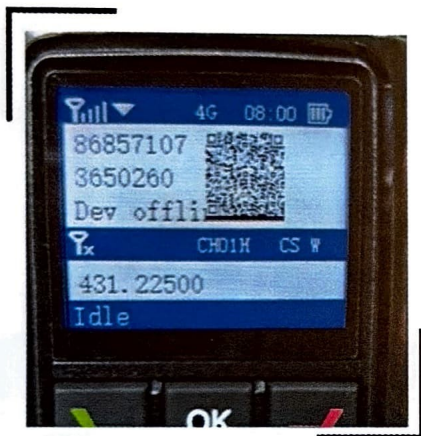

## Question 2

What if multiple intercoms cannot communicate with each other?

**Check if all intercoms are in the same group. If not, select the same group for all.**




# FAQs

## Question 3

How do I select a group on the intercom?

Navigate to the "**Group**" option in the menu, then select your desired group.

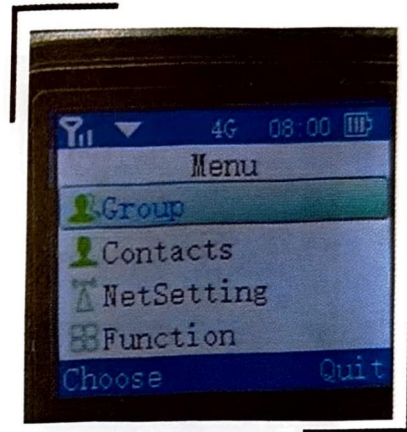

## Question 4

Can I make a private call to a specific intercom?

Yes. Go to the "**Contacts**" option in the menu, then select the specific intercom you wish to call privately.



# FAQs

## Question 5

What if I cannot transmit audio when pressing the **PTT** button?

Ensure the **MIC** (microphone) port on the front of the intercom is not blocked. Blockage of the MIC port will prevent audio transmission.



# Feature Description

**Group** ————— Group Selection.

 


**Contacts** ————— Select one of the walkie-talkies for private chat.



**NetSetting** ————— Intercom settings

**1Single call timeout** ————— Sets the automatic exit time for the menu interface. Options: Always On, 15s, 30s, 45s, 60s, 75s, 90s, 105s, 120s.

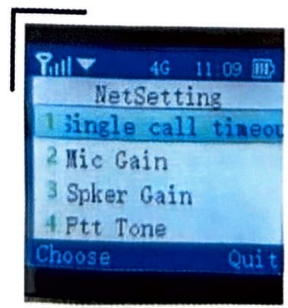

# F

## eature Description

**NetSetting** — Intercom settings

**2.Mic Gain** — How to adjust and boost the microphone? Go to NetSetting, select MicGain, and choose from levels +1, +2, +3.



**3.Spker Gain** -How to adjust and boost the speaker? Go to NetSetting, select Spker Gain, and choose from Low, Medium, High.



# F

## eature Description

**NetSetting** — Intercom settings

### 4.PTT Tone — How to adjust PTT mute

Go to NetSetting, select Ptt Tone, and choose between OFF or ON.



# F

## eature Description

 
How to switch to analog pairing?

Walkie-talkies with the same pairing frequency can communicate with each other.



How to enable relay?



Select Menu → Functions → Relay → Enable.

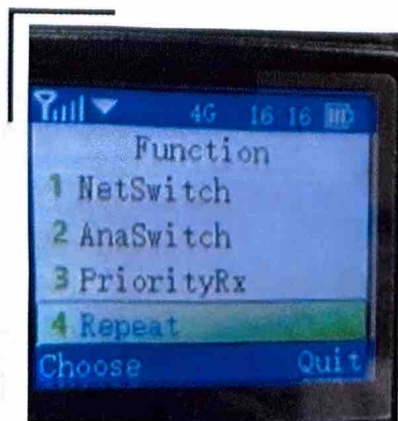

# Feature Description

Receive Priority

Menu → Functions → Receive Priority → Public Network Priority

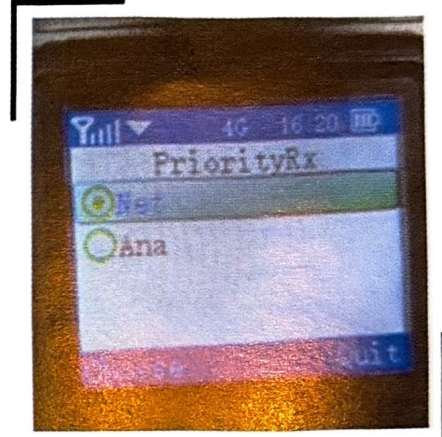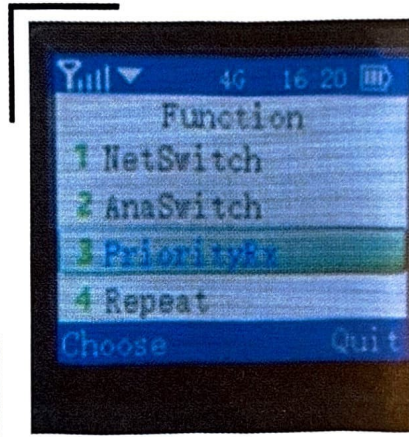

# F

## eature Description

### Product key analysis

